		DIP switch Input resistance MC systems							
Position	1	2	3	4	5	6	7	8	
Ohm	10	24	47	100	240	470	820	1000	
5,4	ON	ON	ON	ON	ON	ON	ON	ON	
5, 1 5,5	ON	ON	ON	ON	ON	OFF	OFF	ON	
5,5 5,7	ON	ON	ON	OFF	ON	ON	ON	ON	
	ON	ON	ON		OFF	ON	OFF	ON	
5,9 6	ON	ON		OFF					
6 6 5			ON	OFF	OFF	OFF	OFF	OFF	
6,5 7.2	ON ON	ON ON	OFF	OFF	ON	ON	ON	ON	
7,3			OFF	OFF	OFF	OFF	OFF	OFF	
7,5	ON	OFF	ON	ON	OFF	ON	OFF	OFF	
8	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	
8,5	ON	OFF	OFF	ON	ON	ON	ON	OFF	
9	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	
9,5	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	
10	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
12,5	OFF	ON	ON	ON	OFF	ON	ON	OFF	
15	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	
17,6	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	
20,1	OFF	ON	OFF	OFF	OFF	ON	ON	ON	
25,3	OFF	OFF	ON	ON	ON	ON	ON	ON	
30	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	
36,5	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	
40,7	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	
47	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	
58,4	OFF	OFF	OFF	ON	ON	ON	OFF	ON	
62	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	
70	OFF	OFF	OFF	ON	OFF	ON	ON	ON	
75,1	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	
82	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	
90,9	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	
100	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	
120	OFF	OFF	OFF	OFF	ON	ON	ON	ON	
136	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	
140	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	
160	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	
163,5	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	
191	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	
200	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	
232	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	
249	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	
301	OFF	-	_	OFF	OFF	ON	ON		
322	OFF	OFF OFF	OFF	OFF	OFF	ON	OFF	OFF ON	
			OFF					ON	
452	OFF	OFF	OFF	OFF	OFF	OFF	ON		
470	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	
820	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	
1000	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	
47000	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

Tabelle1

Tabelle1

DIP switch Input capacity MM systems									
Position	1	2	3	4					
Picofarad	50	100	180	330					
50	ON	OFF	OFF	OFF					
100	OFF	ON	OFF	OFF					
150	ON	ON	OFF	OFF					
180	OFF	OFF	ON	OFF					
230	ON	OFF	ON	OFF					
280	OFF	ON	ON	OFF					
330	OFF	OFF	OFF	ON					
380	ON	OFF	OFF	ON					
430	OFF	ON	OFF	ON					
480	ON	ON	OFF	ON					
510	OFF	OFF	ON	ON					
560	ON	OFF	ON	ON					
610	OFF	ON	ON	ON					
660	ON	ON	ON	ON					

Please add the capacity of the tonearm cable and the connecting cable. If unknown: Tonearm cable 20pf / connecting cable 50pf per metre for good cables.
